



KYNSHOT PB6003 HYDRAULIC GUIDE ROD



INSTALLATION GUIDE




INSTALLATION:

- **STEP 1: ENSURE THAT YOUR FIREARM IS UNLOADED AND POINTED IN A SAFE DIRECTION BEFORE PROCEEDING FORWARD**
- **STEP 2: REMOVE THE SLIDE FROM THE FIREARM IN ACCORDANCE WITH THE DISASSEMBLY INSTRUCTIONS PROVIDED WITH THE MANNUEL**
- **STEP 3: NOW THAT THE SLIDE IS REMOVED, REMOVE THE CURRENT GUIDE ROD FROM THE SLIDE.**
 - **FOR GEN 4 & 5 GLOCK GUIDE RODS ONLY: PLACE THE SMALL ADAPTER PROVIDED IN THE SMALL PASTIC BAG, INSIDE OF THE THROUGH HOLE OF THE SLIDE. FOLOW THE INSTRUCTIONS AS SHOWN ON PAGE 7, 8 AND 9.**
 - **IF YOU DO NOT HAVE A GEN 4 OR 5 GLOCK 19 GUIDE ROD, PLEASE PROCEED TO PAGE 3, 4, 5. AND 6, AND FOLLOW THE INSTRUCTIONS PROVIDED**


Pistol Slide

KynSHOT Hydraulic Guide Rod


Insert the KynSHOT Hydraulic Guide rod into the pistol slide such that the Spring Retaining Washer is completely seated in the bore of the slide. Ensure that the Spring does not bind or is not contacting the edge of the bore on the slide. Contact KynSHOT if you have any questions.

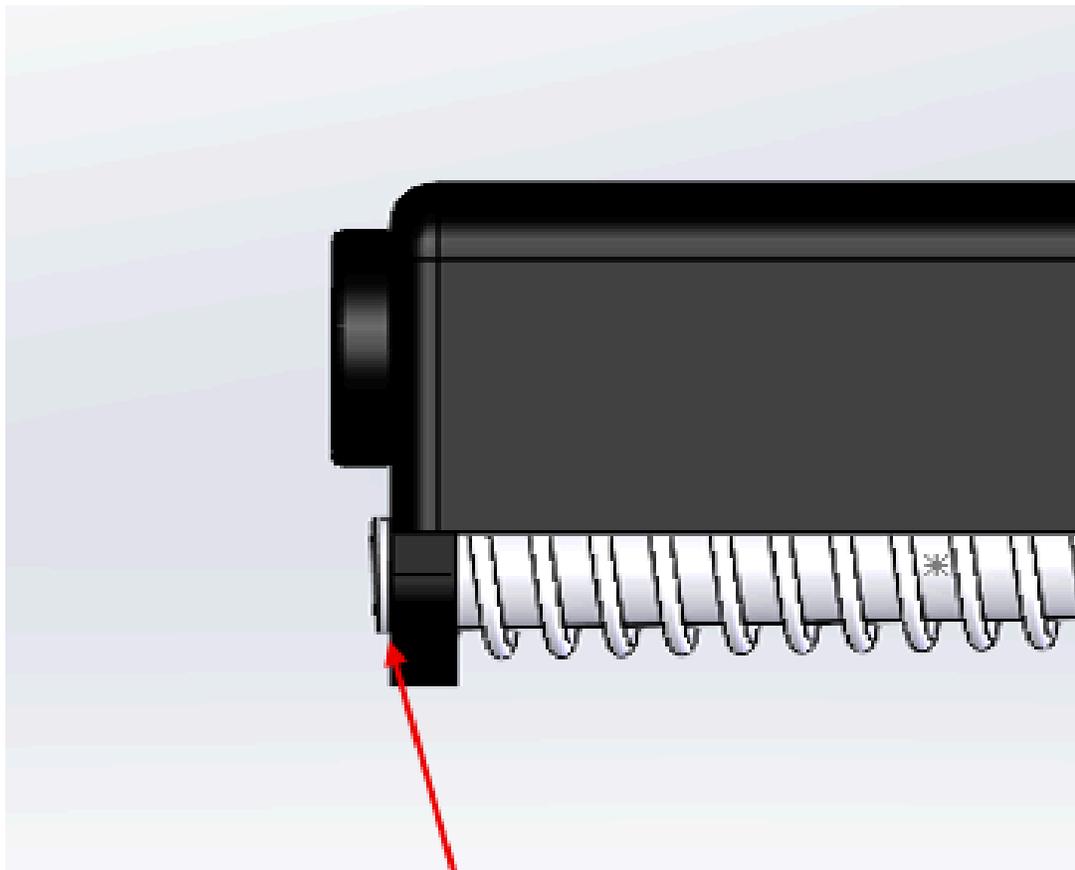


When installed properly the Kyn SHOT Hydraulic Guide Rod should have a slight stick out beyond the pistol slide as shown.

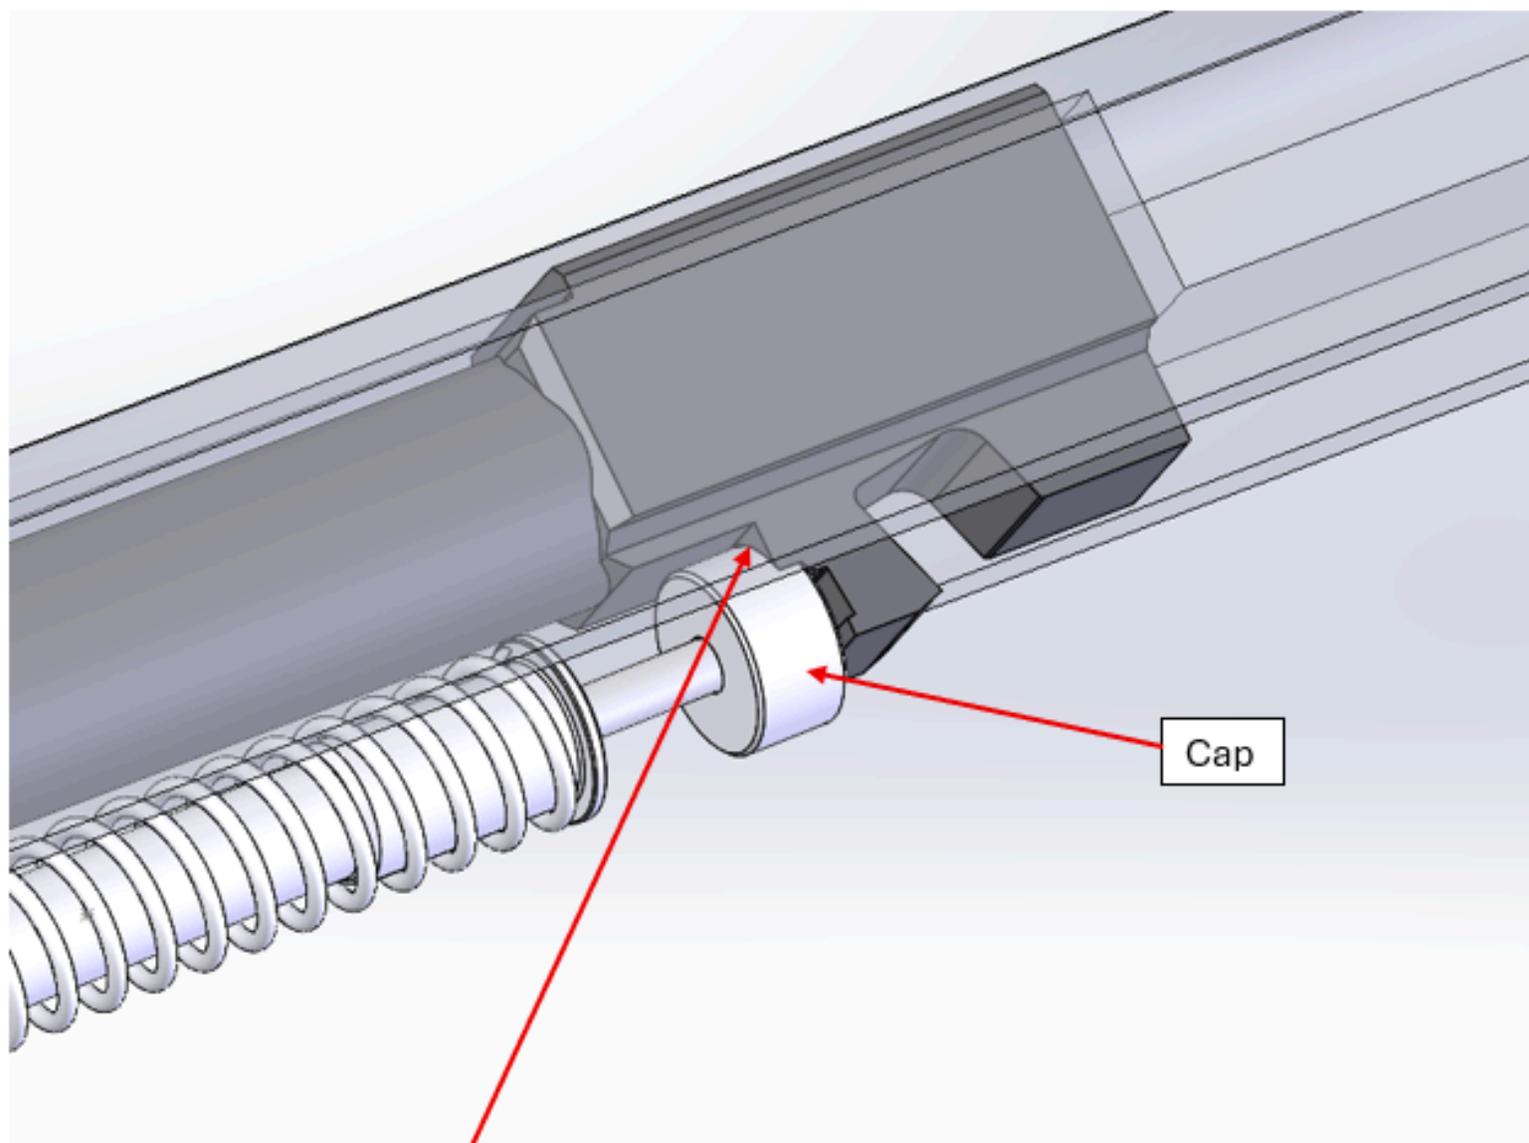


Once the KynSHOT Hydraulic Guide Rod is inserted into the pistol slide rotate the KynSHOT Hydraulic Guide Rod such that the cap is completely seated in the bottom shelf with the radius in the barrel as shown.

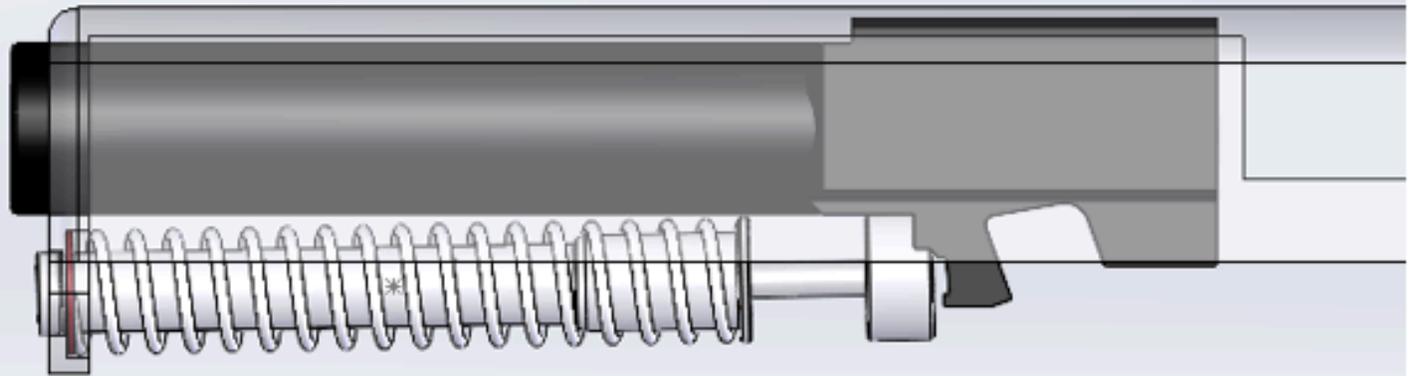


Once the KynSHOT Hydraulic Guide Rod is installed it will be at a slight angle. Once the pistol slide is cycled by hand or by firing the KynSHOT Hydraulic Guide Rod will seek an equilibrium position. DO NOT use the standard spring guide rod as a reference. This procedure must be used to not void any warranty.

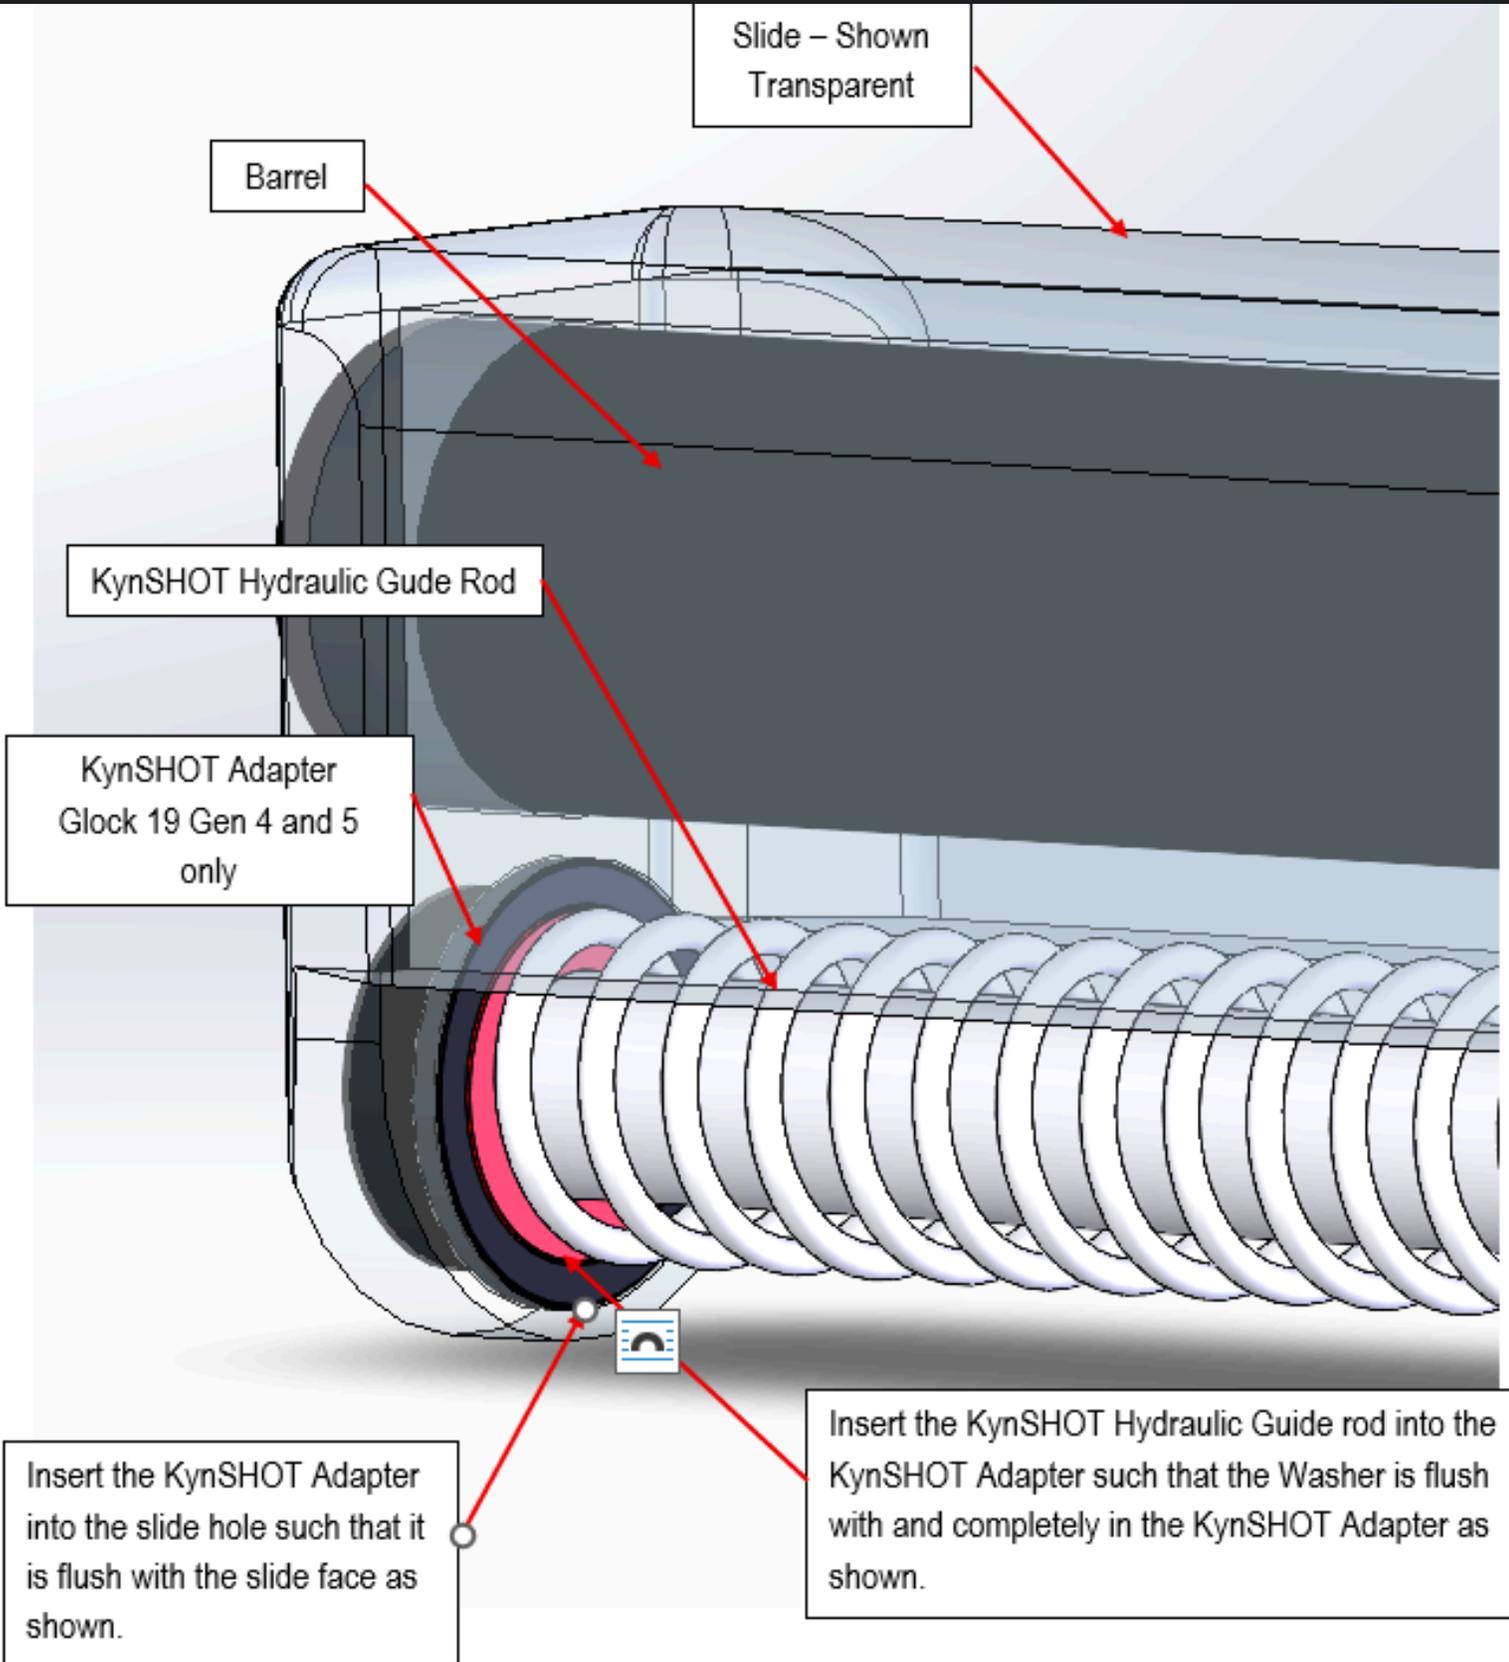

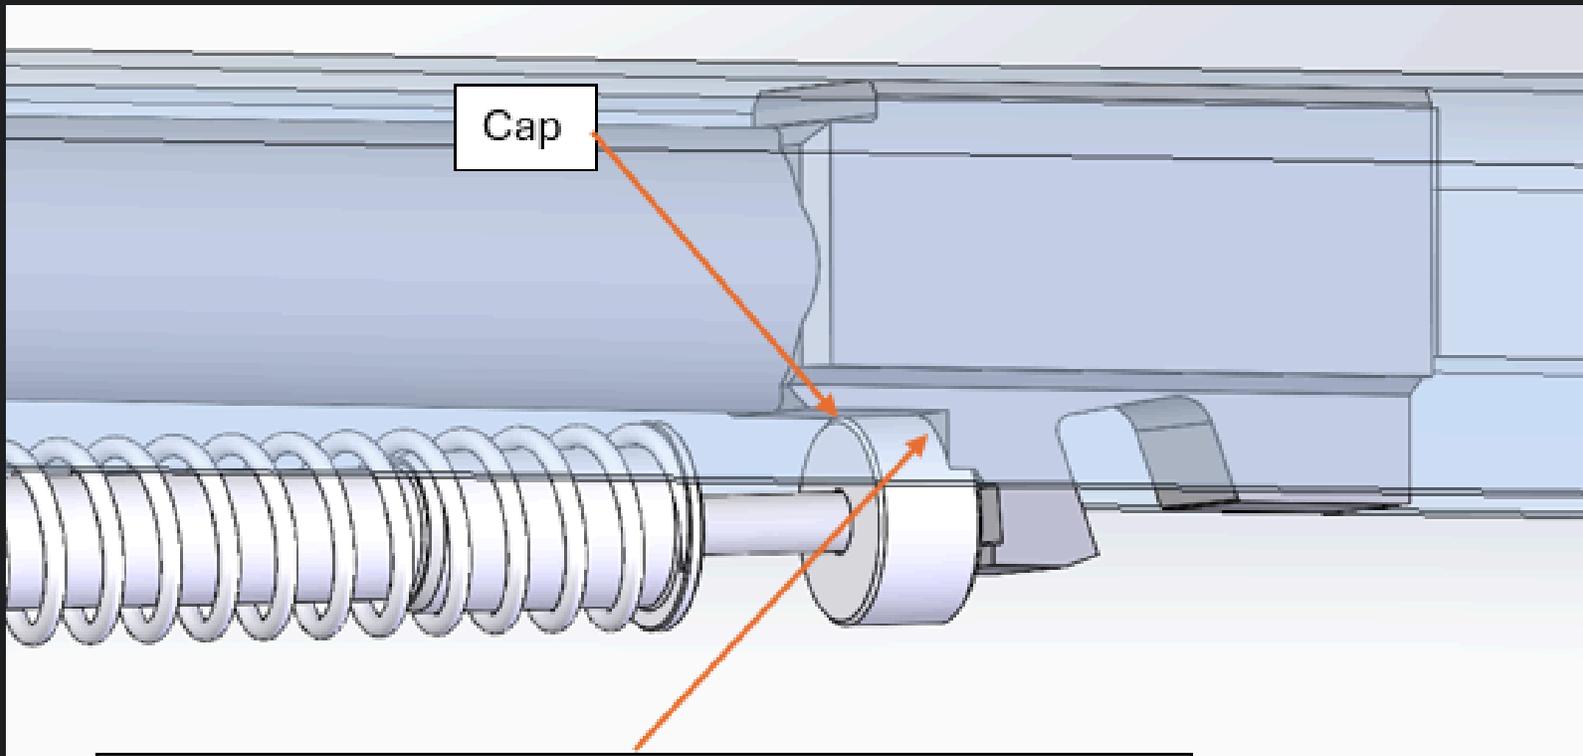


Cap

Once the KynSHOT Hydraulic Guide Rod is inserted into the KynSHOT Adapter (should be flush with the slide) and the spring washer is completely flush with the adapter, rotate the KynSHOT Hydraulic Guide Rod such that the cap is completely seated in the bottom shelf with the radius in the barrel as shown.

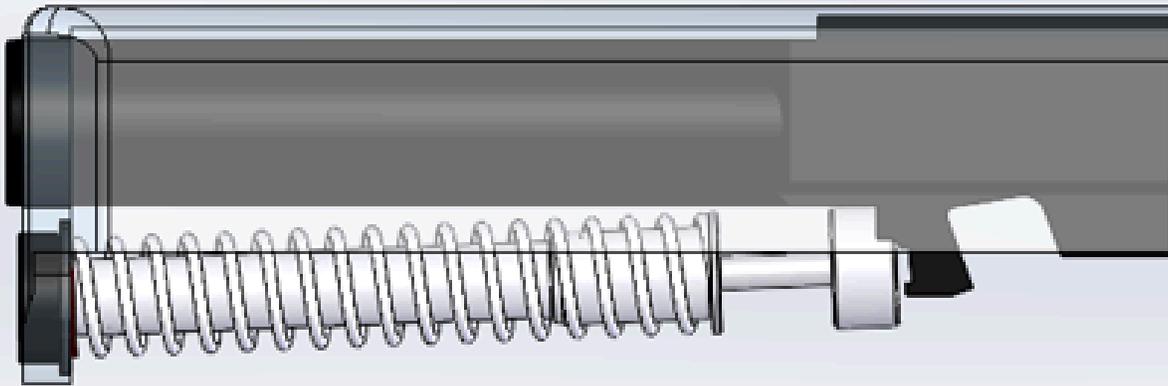

Once the KynSHOT Hydraulic Guide Rod is installed it will be at a slight angle. Once the pistol slide is cycled by hand or by firing the KynSHOT Hydraulic Guide Rod will seek an equilibrium position. DO NOT use the standard spring guide rod as a reference. This procedure must be used to not void any warrantee.

When installed properly there should be a slight gap between the KynSHOT Hydraulic Guide Rod and the end of the KynSHOT Adapter as shown.

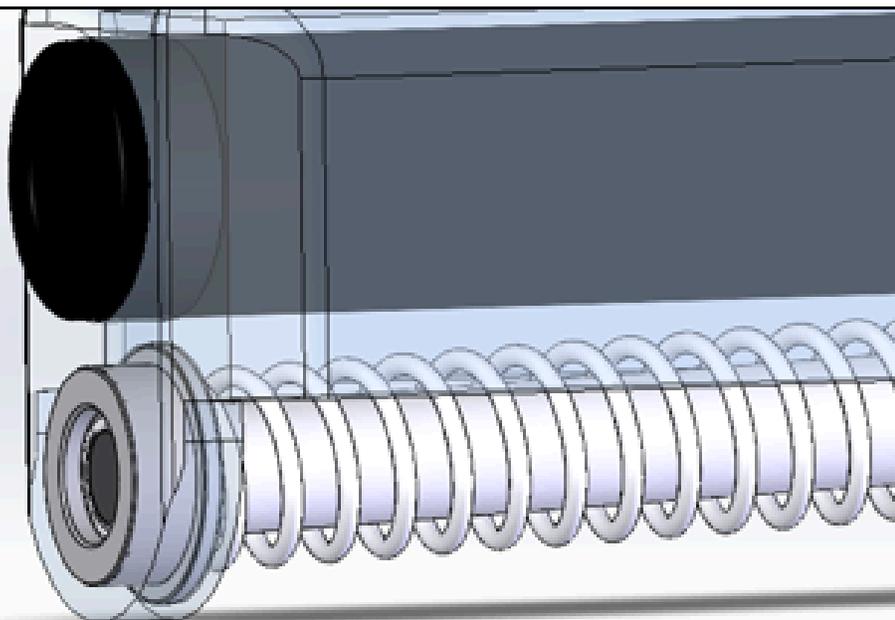



QUESTIONS?

CONTACT US:

PHONE: +1 716-616-3630

WEB: [HTTPS://WWW.KYNSHOT.COM/CONTACT/](https://www.kynshot.com/contact/)



**KYNTEC CORPORATION/KYNSHOT HEADQUARTERS:
5775 BIG TREE ROAD, UNIT 3
ORCHARD PARCK, NY 14127**